




# boardprep


5 Circuit Road Westmead 3608 | Tel: 031 700 3187  
 Fax: 031 700 3781 | www.boardprep.co.za

## HANGING CUPBOARD


### ASSEMBLY INSTRUCTIONS

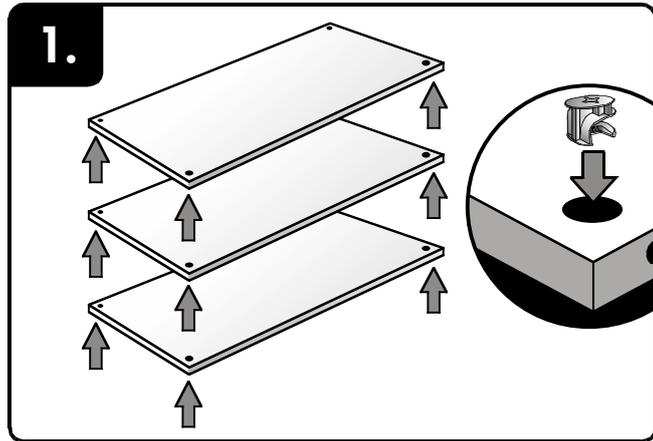




Place cam locks in all holes of matching size.

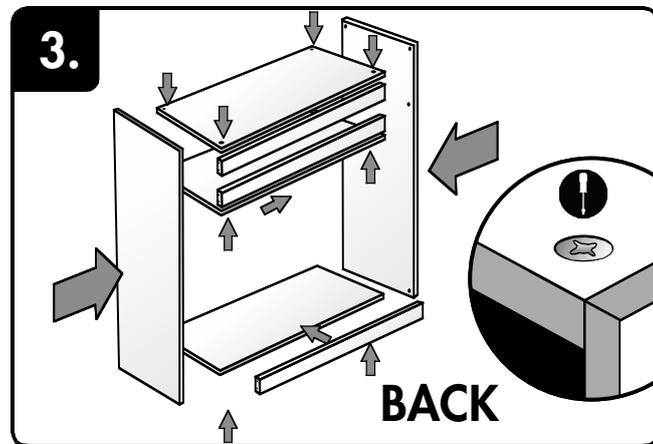


Connect side panels to all 3 support rails and top, mid horizontal shelf and cupboard bottom, then fasten cam locks.

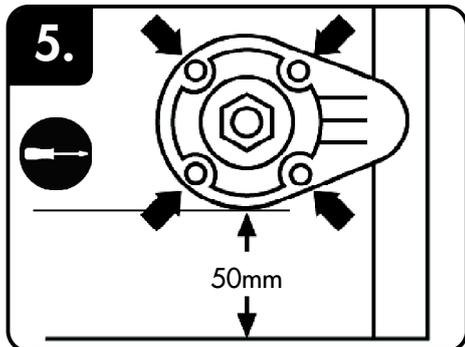


Mark lines along the base 50mm from the front and back of the unit. Line up the base section of the foot with this line and screw in, ensuring the flange goes over the join with the side panel for added stability. Note that the placement of the base overlapping the side panel does not apply for an exposed side, as it will interfere with the skirting board.

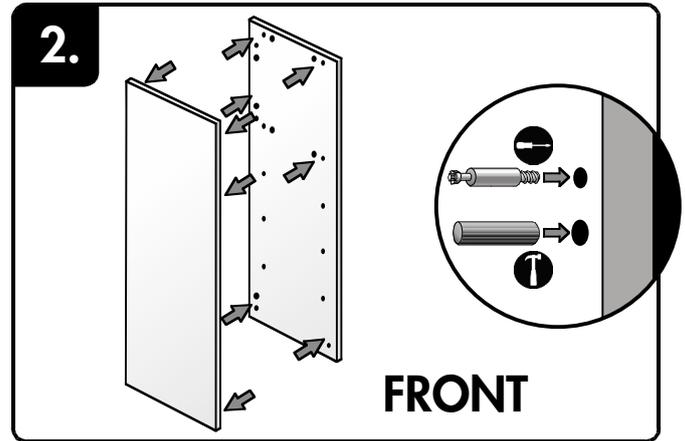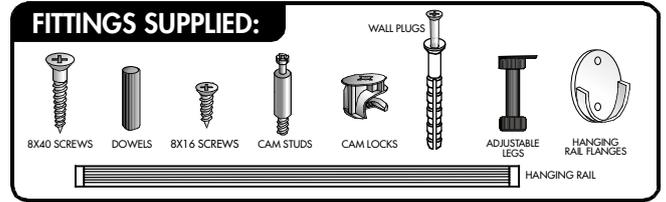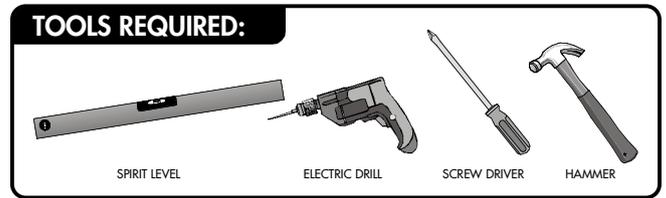


Screw studs and gently knock dowels into pre-drilled holes in side panels. The unit must be assembled on a firm smooth surface as to avoid damaging the panels. Dowels may also puncture the back of the panel if there is no resistance on a soft surface.

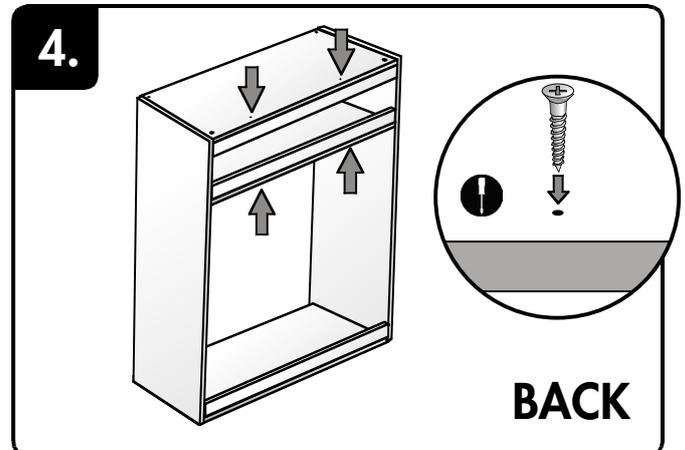


Screw support rails into top, mid horizontal shelf and cupboard bottom.

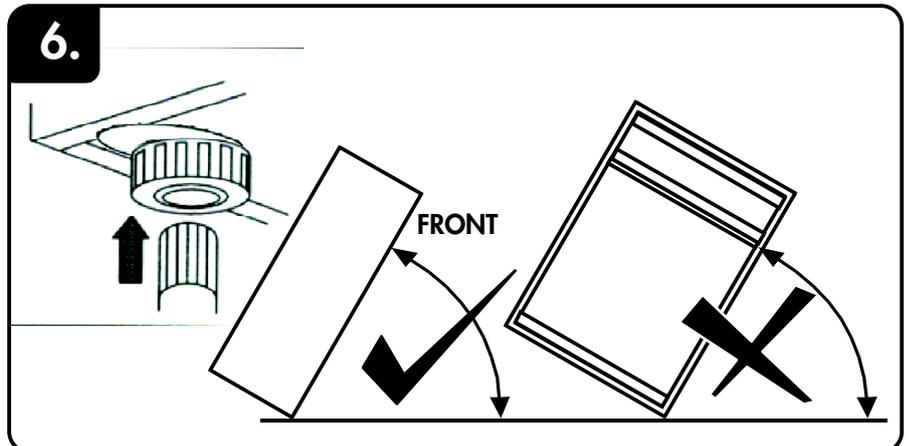


Insert the rest of the leg into the base section. This will be done as the unit is maneuvered into position. Care must be taken to use only the front or back leading edge – not the side edges – when raising the unit into position, or it may be damaged.

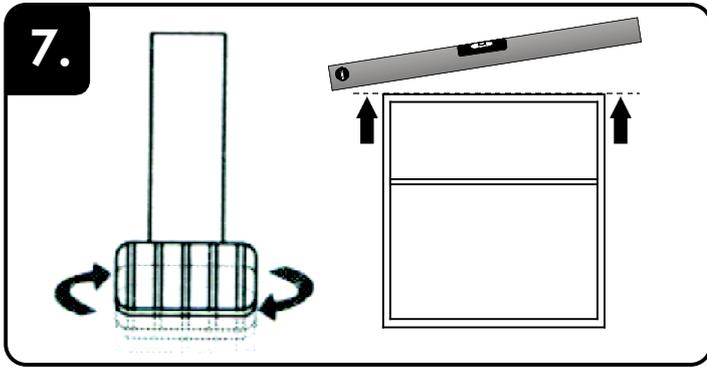


Adjust the other ends of all 6 of the legs until the unit sits level and stable on the ground. Always use a spirit level to ensure cupboard is level when fixing it to the wall. If unit is not level the installation will not be successful.

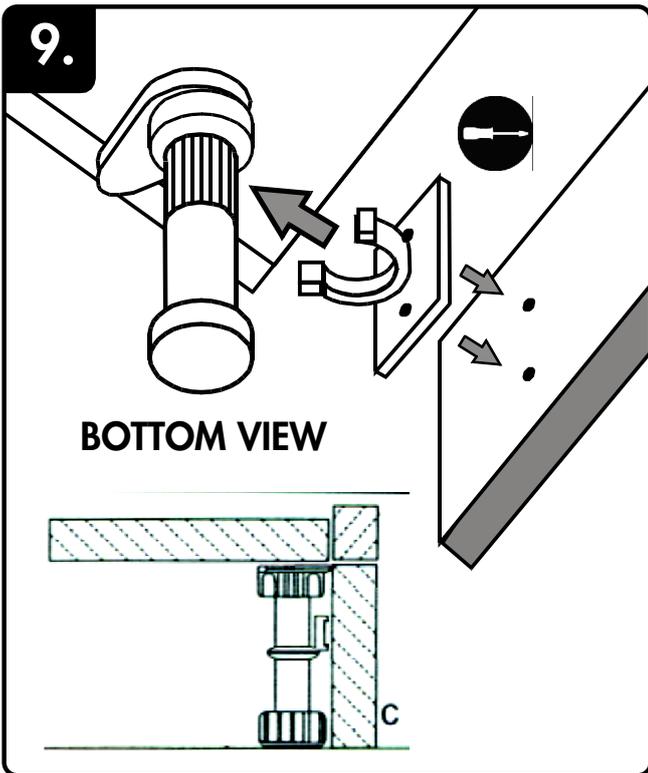


Each leg has a plate on it with a semi-circular clip attached which clips on to the shaft of the leg. Screw the plates onto the corresponding positions on the skirting first and then clip the entire skirting onto the legs.

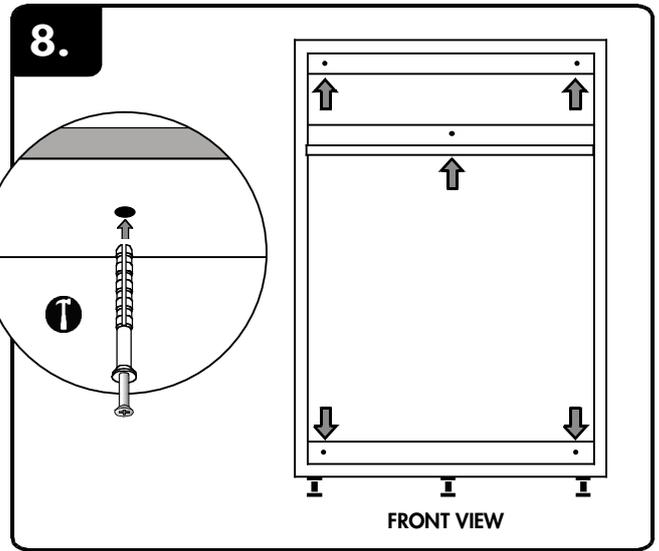


Place the cupboard in its final position and drill 5 holes for wall plugs – 2 go through the top rail into the wall, 2 in the bottom rail and the last one centered in the middle rail. Insert the wall plug into the holes, and hammer into place.

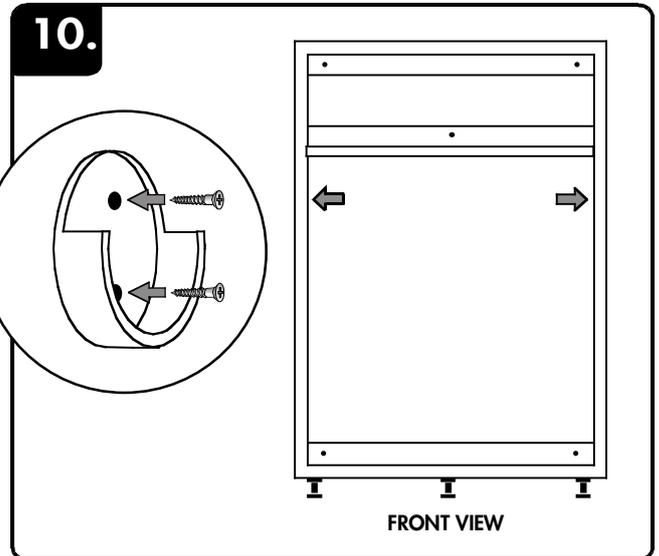

Attach the two hanging rail flanges to the inside of the cupboard as shown, taking care to centre them between the front and back of the cupboard.

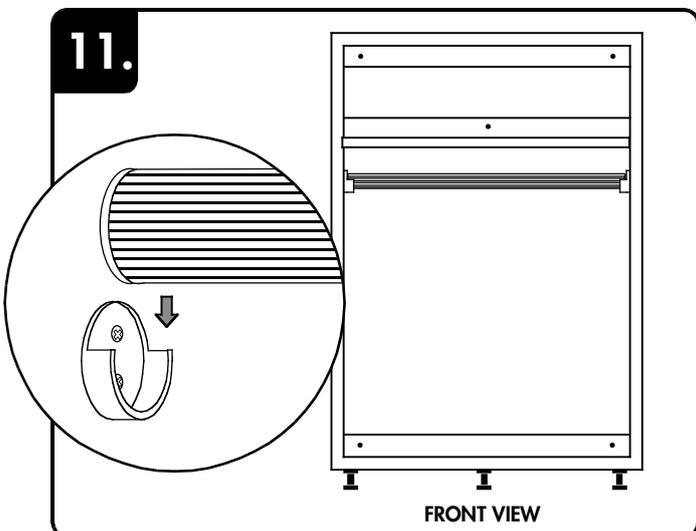

Lower the hanging rail into the hanging rail flanges.

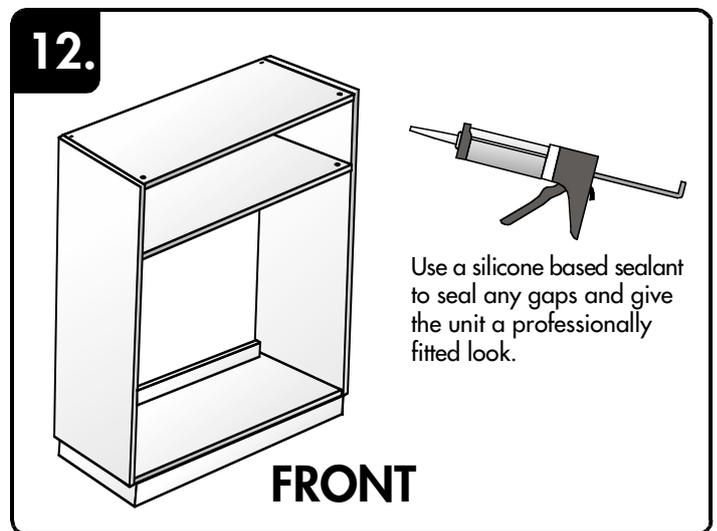

Use a silicone based sealant to seal any gaps and give the unit a professionally fitted look.

**FRONT**

Unit is complete.